

Supply & Power

Supply Voltage	18 ... 26 V DC
Power Consumption	1.8 W (Standby) 150 W (Peak)

Interfaces

Wireless	Wi-Fi: 2.4/5GHz a/b/g/n/ac Bluetooth: Input V4.2
HDMI	2.1 ARC, eARC
Ethernet	10/100 Mbps

Ambient Conditions

Temperature	-10 ... 50 °C / 14 ... 122 °F
Humidity	max. 95 % RH (non-condensing)
Ingress Protection	IP20

Included power supply

Type	DC barrel jack
Barrelconnector	5.5 x 2.5 mm 
Cable length	AC: 110 cm / 43" DC: 140 cm / 55"
Electrical properties	100-240V~ 50/60Hz 2.5A max. 24V = 5.0A const.

Audio Specifications

Speaker Type	3.0 Soundbar Matrix
Class-D Amplifier	7 x 25 W nominal / 50 W peak
Frequency Range	48 ... 20 00 Hz
Crossover Frequency	2 200 Hz
Woofer Ø	125 mm / 4.7"
Tweeter Ø	25 mm / 1"

Dimensions

Total H x W x D	138 x 1100 x 102 mm / 5.4 x 43.3 x 4"
Net weight	7.9 kg

Contains FCC ID: 2ACML-201850
This device complies with part 15 of the FCC Rules.
Operation is subject to the following two conditions:
1 . This device may not cause harmful interference.
2 . This device must accept any interference received, including interference that may cause undesired operation.

The Spotify Software is subject to third party licenses found here:
<https://www.spotify.com/connect/third-party-licenses>.
Use your phone, tablet or computer as a remote control for Spotify.
Go to [spotify.com/connect](https://www.spotify.com/connect) to learn how.

Dolby, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012-2024 Dolby Laboratories. All rights reserved.



Loxone Electronics GmbH
Smart Home 1
4154 Kollerschlag
Austria

Loxone US
3060 Plaza Drive
Suite 105
Garnet Valley, PA 19060
United States



For additional information,
declaration of conformity, visit
www.loxone.com/datasheets

Need Help?
[loxone.com/support](https://www.loxone.com/support)

Loxone UK
The Forum
Station Road
Theale, RG7 4RA
United Kingdom



Soundbar

Part No.: 610154

LOXONE

About the product

The LOXONE Soundbar will reveal immersive sound experience to your TV setup. Whether movie or music listening. Superior sound will be guaranteed. Thanks to the complex audio processing on board, the use cases will be versatile to meet flexibility but integration to your LOXONE System.

Enjoy Dolby Atmos sound with no compromise as well as high-end stereo music listening over various streaming options. Your choice, your sound with the unbeaten quality of LOXONE audio components.

Features

- Highest audio quality playback over HDMI - Wifi - Bluetooth - Spotify - AirPlay - Network
- Playback Local TV sources and send back to LOXONE Systems for sharing to your whole residential
- Thanks to Wifi integration there is no need for complex wiring
- Works with any LOXONE Miniserver
- Independent usability of HDMI ARC/eARC, Bluetooth, Spotify Connect, AirPlay without a Miniserver
- Auto Configuration via App
- State of the Art Dolby Atmos immersive sound

Safety Instructions

Read all information before using the device to ensure safe and proper operation.

- This device is maintenance-free and should only be cleaned with a dry cloth.
- Do not expose the device to physical impact or damage.
- Avoid direct sunlight.
- For indoor use only.

Getting Started

1. Plug the country specific cable to the power supply.
2. Connect the barrel plug to the socket on the back of the device and plug the power supply into the mains.
3. After boot-up, the LED lights up solid orange.
4. **Wi-Fi:** Connect to the Wi-Fi network “sbXXXX” using your computer/mobile device.
Ethernet: Plug in the ethernet cable, go to point 12.
5. A setup browser window (web-interface) should open automatically.
6. (Wi-Fi pairing is available for 30 minutes after boot-up. After that, it will stop until the next reboot.)
7. If the setup does not open automatically, open a browser on your computer/mobile device and connect: 192.168.123.1
8. Follow the the instructions in the web-interface to connect the soundbar to your Wi-Fi network.
9. Once the Wi-Fi connection is successful, the speaker reboots.
10. Connect the HDMI cable to the ARC/eARC port from the TV.
11. Power on the TV and setup the Audio settings to ARC/eARC.
12. You can now use it in standalone mode via AirPlay and Spotify Connect.


Or proceed with pairing it to the LOXONE system:

1. Ensure the speaker is connected to the same network as the LOXONE Miniserver.
Ethernet connection or Wi-Fi connection is possible.
2. Pairing mode remains active until successful pairing with the Miniserver. (LED indication: red, orange, green flashing)
3. The speaker can be paired via:
 - LOXONE Config under the “Audio” Peripheral tab using “Audio Device Search”
 - LOXONE App under “Audio Device Search”. You can enable auto-configuration to fully integrate the speaker into the selected room.



If the soundbar is not to be or cannot be connected to a network, or in the event of network problems, the HDMI signal will always be played back.


Front

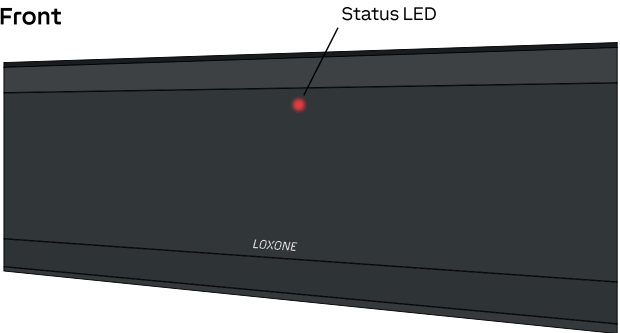

Status LED

Orange fast flashing	Boot-up
Solid orange	Wi-Fi pairing active
Orange flashing	Paired, no communication with system/network
Red, orange, green flashing	LOXONE pairing mode
Red fast flashing	Error
Red flashing	Firmware update
Magenta flashing	HDMI activated
Magenta, blue flashing	Dolby Atmos signal
Blue flashing for 10 seconds	Bluetooth connected
Green flashing for 10 seconds	AirPlay / Spotify Connect playback
Off	Standby / playing

Back

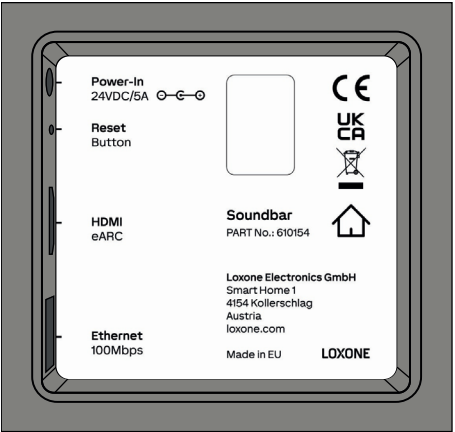

Reset Button

Resets the speaker to factory default settings.

- Press the button for 3 second using a paper clip once the speaker has fully booted.
- Do not use excessive force when pressing.
- A sound confirms that the reset was successful.